



**Installation Procedure**

**Fabric Wrapped Acoustic Panels**

1. Mount clips to wall surface using sheet rock screws (recommended), threaded lag shields or hot glue.
2. Clips should be located 6" in from the edge of the panel to avoid the fabric layer on back.
3. Apply a walnut sized amount of panel adhesive onto the wall surface next to the impaling clip. (Figure 1)
4. Push the panel onto the impaling clips.(Figure 2 ,3,4)

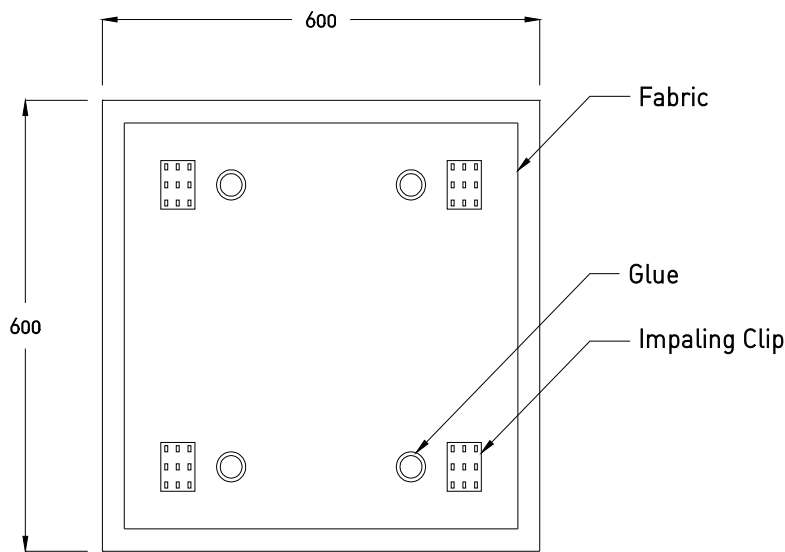

(Figure 1)

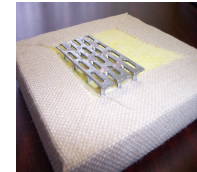

Fabric Panel



Impaling Clip



Glue

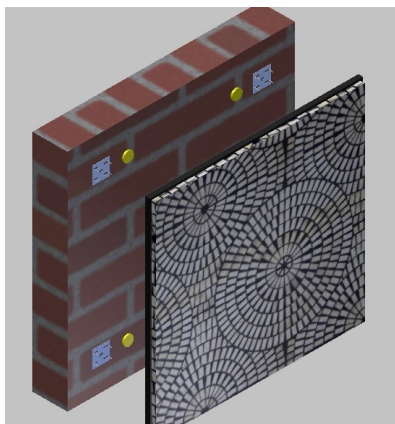


Figure 2

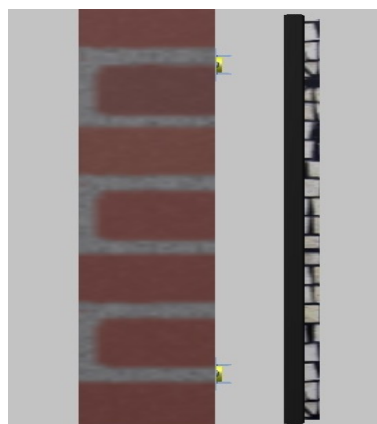


Figure 3

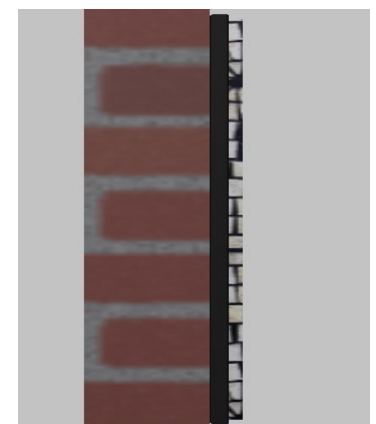


Figure 4

Note: On walls it is recommended to use a string line to line up the panels in an even pattern.